
en Pump module DENOXTRONIC 2.2




Service instruction for urea filter 1 457 436 033


► Fig. 1: Removal of the filter cover

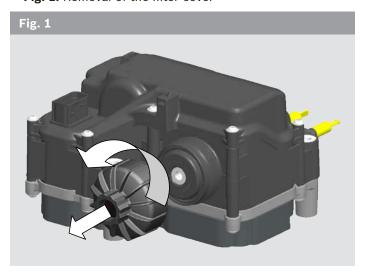


► Fig. 3 | Fig. 4: Removal of the main filter

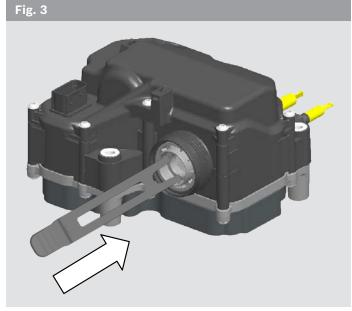


► Fig. 2: Removal of the equalizing element

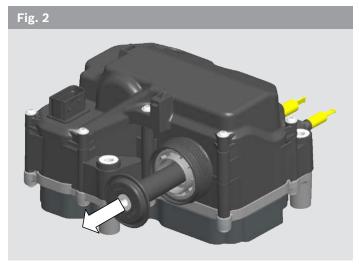

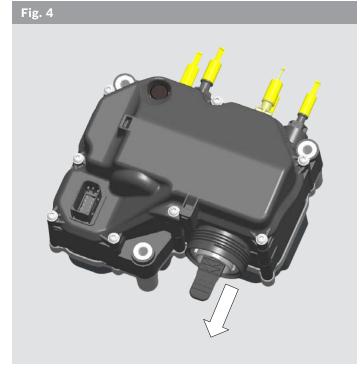


en Service Instruction


► Fig. 5: Cleaning of functional surfaces with water only

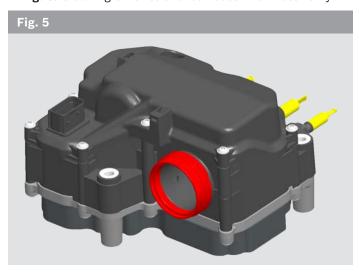

► Fig. 8: Mounting of the filter cover with 20N +/-5

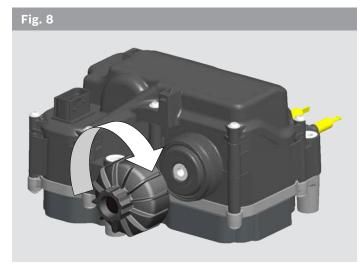

► Fig. 6: Assembly of the new filter (Oil the O-rings of the filter with Mobil Velocite Nr. 6 oil)

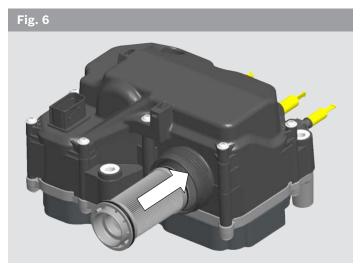

► Fig. 7: Assembly of the new equalizing element, oil the O-ring (red part in the picture) with Mobile Velocite Nr. 6 oil)

